

Installation Manual

for **BAUER** Solar Modules - V.8

Address **BAUER Solar Engineering GmbH**
Hinter der Mühl 2
55278 Selzen
Germany

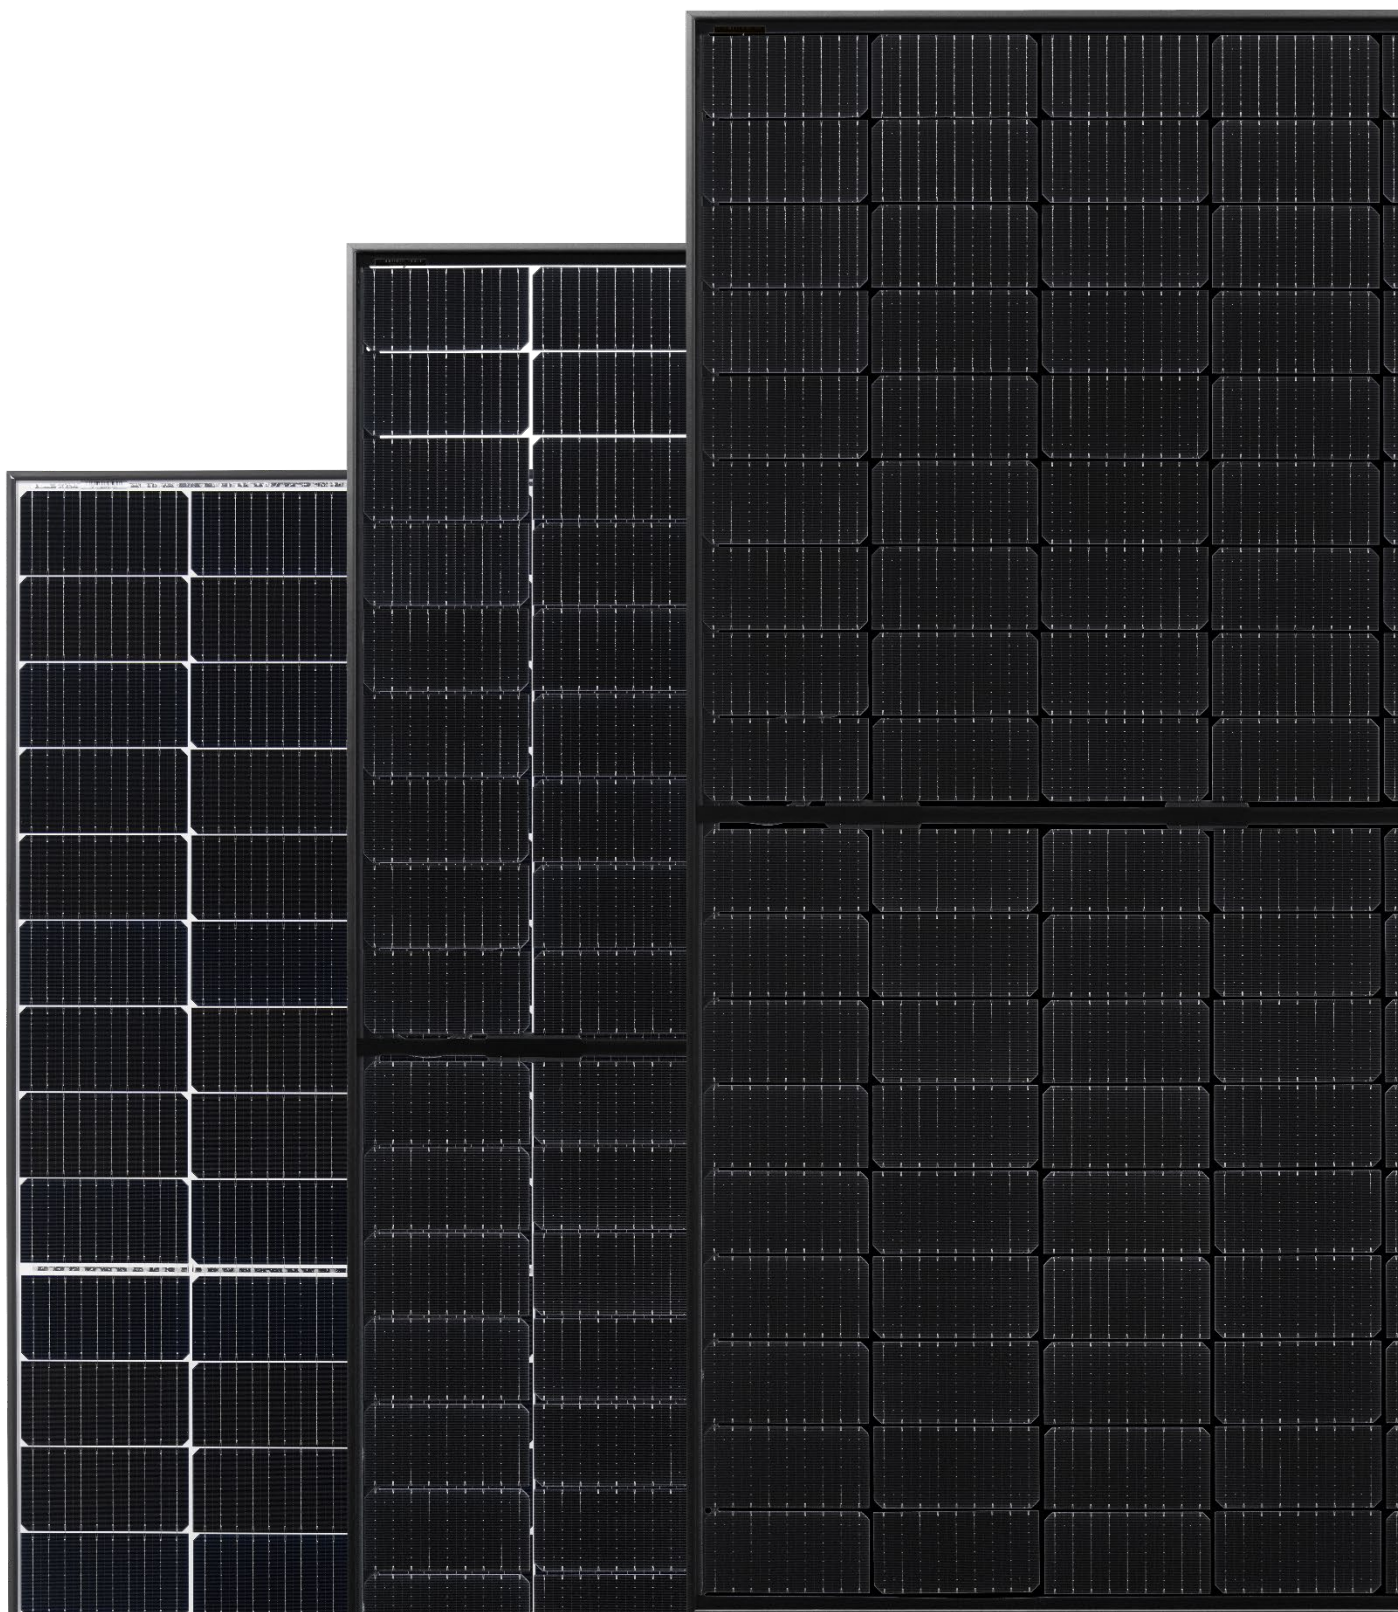


Table of Contents

1.	General Information.....	3
1.1	Installation Manual Disclaimer.....	3
1.2	Limitation of Liability.....	3
2.	Safety Precautions	3
2.1	General Safety.....	3
2.2	Safety Guidelines for Handling Modules.....	4
2.3	Safety Guidelines during Installation	4
3.	Electrical Installation	5
3.1	Electrical Installation.....	5
3.2	Unpacking and Storage.....	6
4.	Mechanical Installation	7
4.1	Precautionary Measures and General Safety	7
4.2	Environmental Conditions	7
4.3	Installation Requirements	7
4.4	Optimum Orientation and Tilt	8
4.5	Avoid Shading.....	8
4.6	Reliable Ventilation	8
4.7	Module Wiring	9
4.8	Grounding.....	9
5.	Mounting Instructions.....	10
5.1	Mounting Method: Bolting	11
5.2	Mounting Method: Clamping	12
5.3	Max Test Loads for Standard Bolting Installations	13
5.4	Max Test Loads for Standard Clamping Installations	14
6.	Maintenance	17
7.	Module Cleaning Guidelines.....	17
8.	Disposal	18

1. General Information

Congratulations! With BAUER Solar photovoltaic modules, you have purchased a high-quality product. This installation manual contains important information on safety, installation and operation of your modules, which you need to read thoroughly and carefully and take note of all instructions before installing, wiring, operating, servicing or transporting the modules.

All safety information and mounting instructions in this installation guide must be read carefully and must be fulfilled. The photovoltaic modules must be installed and operated in accordance with the generally recognized technical regulations. During assembly, the relevant national guidelines on health and safety and accident prevention must be observed and adhered to. This particularly applies to working on the roof. Please observe all local, regional, national and international legal provisions, guidelines, standards and regulations, as well as the guidelines on work safety from the employer's liability insurance associations. Failure to follow these instructions may result in property damage, injury or even danger to death. Assembly, installation and initial operation can only be carried out by licensed and qualified professionals. Appropriate safety measures (e.g. fall protection devices) must be used for work, particularly on roofs. The installers must inform end-users (consumers) of the aforesaid information accordingly. The word "module" or "PV module" used in this manual refers to one or more standard solar modules of BAUER Solar which are listed in the document. For better readability, the module designation is abbreviated for all tables, e.g. BS-XXX-108M10HBT-GG is shown as BS-XXX-108M10.

1.1 Installation Manual Disclaimer

The information contained in this manual is subject to change by BAUER Solar without prior notice. BAUER Solar gives no warranty of any kind whatsoever, either explicitly or implicitly, with respect to the information contained herein.

In the event of any inconsistency among different language versions of this document, the German version shall prevail, unless regional characteristic items shall refer to local language installation manuals, on which BAUER Solar HQ reserve the right of explanation. Please refer to our product lists and documents published on our website at: www.bauer-solar.de as these lists are updated on a regular basis.

1.2 Limitation of Liability

BAUER Solar shall not be held responsible for damages of any kind, including – without limitation – bodily harm, injury or damage to property, in connection with handling PV modules, system installation, or non-compliance with the instructions set forth in this manual.

2. Safety Precautions



Warning

Before attempting to install, wire, operate and/or service the module and other electrical equipment, all instructions should be read and understood. PV module connectors pass direct current (DC) when exposed to sunlight or other light sources. Contact with electrically active parts of the module, such as terminals, can result in injury or death, irrespective of whether or not the module and the other electrical equipment have been connected.

2.1 General Safety

- The safety requirements are in accordance with IEC/UL 61730 and all BAUER Solar photovoltaic modules are certified in accordance with IEC/UL 61215 and IEC/UL 61730 (protection class II).
- Please observe all regulations and guidelines under public law during planning, erection, operation and maintenance of grid-connected PV plants including the following: national standards, technical connection conditions, accident prevention regulations, the relevant valid guidelines from the association of property insurers and all other relevant general guidelines.
- Before installing modules, please consult local laws and regulations to comply with their requirements for building fire resistance.
- When installing on the roof, it is necessary to cover the roof with a layer of fireproof material suitable for that level and ensure sufficient ventilation between the back panel and the installation surface. The different structures and installation

methods of the roof can affect the fire safety performance of the building. If the installation is improperly executed, it may lead to a fire.

- To ensure the fire rating of the roof, the minimum distance between the module frame's bottom side and the roof surface should be at least 10 cm.
- Please use appropriate module accessories such as fuses, circuit breakers, and grounding connectors according to local regulations.
- Do not install modules if exposed flammable gases are present nearby.

2.2 Safety Guidelines for Handling Modules

- Handle modules with care to prevent damage, in particular, do not tread on the module. Do not let it drop and protect it from falling objects.
- Solar modules must not be kept or transported on the connection cable or socket.
- Do not damage or scratch the back of the modules and do not set a module down heavily on surfaces. Take particular care when the module is on an edge.
- Wear gloves and personal protective equipment (PPE) which include but not limited to fall protection, ladder or stair and personal protective measures.
- Do not stack the modules on top of one another to avoid damage.
- Never leave the modules unsecured or without a bracket.
- Contact with module surfaces or frames may cause electric shocks if the front or back glass is broken.

2.3 Safety Guidelines during Installation

- The entire PV system must be mounted according to the generally recognized technical regulations by licensed electricians in accordance with the applicable electrical codes such as the latest National Electrical Code or other national or international applicable electrical codes.
- Do not install or handle modules in unsafe conditions including but not limited to strong winds or gust, sandy roofs.
- Do not allow children or unauthorized persons near the installation site or module storage area.
- Do not disassemble, change or adapt the module or remove any BAUER Solar fitted part or nameplate, otherwise guarantee claims will become invalid.
- Do not use or install damaged modules.
- Do not artificially concentrate sunlight on a module.
- Do not connect or disconnect modules when current from the modules or an external source is present.
- The PV module does not contain any serviceable parts. Do not attempt to repair any part of the module.
- Keep the junction box cover closed at all times.
- Prior to installation, remove all metallic jewelry to prevent accidental exposure to live circuits.
- Never interrupt electrical connections or pull-out connectors while the circuit is in operation.
- Only use insulated tools and wear rubber gloves that are recommended for electrical installation work.
- During installation and while the module is exposed to light, avoid touching the electric terminals or cable ends.
- The solar modules, particularly the connectors and tools, must be dry during installation.
- Avoid loading the module cable mechanically, covering drainage holes or allowing water to run in the direction of the plug connectors.
- Disconnecting from direct current conductors can cause electric arcs. It is therefore essential that you disconnect the inverter from the alternating voltage grid before the start of any work on photovoltaic systems, particularly before disconnecting connectors in direct current circuits.
- Solar modules can only be taken out of operation by interrupting light irradiation. To do this, the front and back must be covered completely with a towel, cardboard, or other completely opaque material.
- Do not use the modules close to devices or areas where gas is produced or can accumulate.
- Do not install solar modules close to highly flammable substances or vapors (solar modules are not explosion-protected equipment).

- If the disconnects and overcurrent protection devices cannot be opened or the inverter cannot be powered down, cover the fronts and backs of the modules in the PV array with an opaque material to stop the production of electricity when installing or working on a module or wiring.
- When installing modules in light rain, morning dew, take appropriate measures to prevent water ingress into the connector.
- Not allowed to use modules on mobile products of any kind like cars, trucks, boats or buoys. They are intended to operate solely in open air and on solid ground.
- If modules are used as balcony modules, local norm regulations must be followed. For German market, German DiBt with abZ for overhead installations can't be provided. The installer shall bear the safety risks and losses caused by the module not being firmly fixed.
- Observe all safety measures and instructions for other components used.
- Fire protection guidelines and requirements for houses and buildings from the local authorities must be considered.
- If necessary, please take suitable lightning protection measures in accordance with country-specific standards and regulations.
- If there is a lightning protection system at the building already existing, then the module frame and the mounting system must be integrated into external lightning protection and if necessary, surge protection devices should also be installed. Please get in touch with a lightning protection specialist for this.

3. Electrical Installation

Product Identification

- Each module has two or three barcodes (one in the laminate under the front glass, the second on the rear side of the module and the third on the long side frame) those act as unique identifier.
- A nameplate is also affixed to the rear of each module. This nameplate specifies the model type, as well as the main electrical and safety characteristics of the module.

3.1 Electrical Installation

- Take all necessary precautions during installation, operation and servicing of the modules to avoid electrical hazards.
- All electrical connections must be securely closed.
- Contact with a direct voltage of 30 V is dangerous, electrical shock or burn can occur, any contact above those voltages can be fatal.
- If the direct voltage of the entire system exceeds 100 V, the installation, operation and maintenance must be performed by a licensed electrician, unless the local regulations for handling electrical systems specify otherwise.
- Module electrical ratings are measured under Standard Test Conditions (STC) of 1000 W/m² irradiance, with an AM1.5 spectrum, and a cell temperature of 25°C and marked on nameplate.
- Detailed electrical characteristics of BAUER Solar modules can be found in module datasheets on www.bauer-solar.de
- The maximum open circuit voltage of the system must not exceed the maximum system voltage of the module.
- The maximum reverse current resistance of the module has must be followed. Certified adequate overcurrent blocking devices (fuse or current interruption) should be used depending on the safety values.
- As a manufacturer, Stäubli guarantees interconnectivity and pluggability within the Stäubli Multi-Contact® connector family considering the system voltage up to 1000 V. They also guarantee interconnectivity and pluggability for the Stäubli Multi-Contact® connector EVO2 and EVO2A. Due to the gap of technical performances between MC4 connectors and MC4-EVO2A connectors, only the lower technical parameters from both connectors, such as the rated voltage and the rated current, are available in case of cross-connection. Please note that Stäubli does not recognize a compatibility between Stäubli PV-connectors and the connectors from other manufactures. For other connectors, please refer to their supplier's usage instructions.
- During system cabling, please pay attention to the correct cross-sections and connections permitted for the maximum short-circuit current intensity of the module. The cable must have a minimum cross-section of 4mm² and the isolation must be permitted for the maximum system voltage.

- During assembly, beware of tensile force relief on the module connection cable.
- The socket, cable and connector must not be moistened or cleaned with oily, greasy or alcohol-based substances.
- The BAUER modules are fitted with pre-installed bypass diodes ex-works, which are inside the socket.
- Under certain conditions, a module may produce more current or voltage than its Standard Test Conditions rated power. As a result, the module short-circuit current under STC should be multiplied by 1.25, and a correction factor should be applied to the open-circuit voltage, when determining component ratings and capacities. Depending on your local regulations, an additional 1.25 multiplier for the short-circuit current (giving a total multiplier of 1.56) may be applicable when sizing conductors and fuses.
- Alternatively, a more accurate correction factor for the open-circuit voltage can be calculated using the following formula:

$$C_{Voc} = 1 - \alpha_{Voc} \times (25 - T)$$

- **T (°C)** is the lowest expected ambient temperature at the system installation site.
- **α_{Voc} (%/°C)** is the voltage temperature coefficient of the selected module (refer to corresponding datasheet).
- Electrical calculations and design must be performed by a competent engineer or consultant.
- Please contact BAUER Solar's technical support team for additional information pertaining to engineering optimization and approval of project specific module string lengths.

3.2 Unpacking and Storage

Precautions

- Modules should be stored in a dry and ventilated environment on a flat ground (for vertically portrait package, the inclination of ground needs to be less than 8°), to avoid damage or dumping of the modules due to ground deformation or collapse. Storage requirements: relative humidity < 85% and temperature range of -40°C to 50°C.
- Do not remove the original package and keep the wrapping film and carton box in good condition. If the modules require long-distance transport or long-term storage. For long-term storage, it is recommended to store the modules in a standard warehouse with regular inspection, and under confirming of your personal safety, reinforce the pallet in a timely manner if any anomalies are found.
- The warehouse shelves should have sufficient carrying capacity and storage space, regular inspection is required to ensure storage safety. If you need to store the modules in the project site, do not choose soft ground and the ground that is easy to collapse, should choose a hard ground or a higher ground with flat surface to ensure the module packages not collapsing and tilting for long-term storage. The storage time should be less than 30 days.
- In rainy weather, please fully cover the modules and pallets with rain protection and take moisture-proof measures on pallets and cartons to prevent collapse and moisture ingress. Under sun or wind, remove the rain cloth to allow the package to dry as soon as possible, prevent package collapse caused by the rain.
- Do not allow the pallets to soak in water. The ground drainage measures should be done previously for the storage site to prevent a large amount of water accumulation on the ground after rain, causing the ground to soften, sink, etc.
- Do not allow unauthorized persons access the module storage area.
- The modules should be centrally stored.
- Unloading and unpacking instructions must be followed.
- Modules must always be unpacked and installed at least by two people and handled at the frame parts.
- The bending radius of the cable must be at least four times the outside cable diameter.
- Do not stand, step, walk and/or jump or drop objects on modules under any circumstances. Localized heavy loads may cause severe micro-cracks at cell level, which in turn may compromise module reliability and void BAUER Solar's limited warranty.
- Do not leave the module back sheet directly in contact with the support structure underneath when handling or installing the module.
- Do not use sharp instruments on the modules.
- Do not expose the modules and their electrical contacts to any unauthorized chemical substance (e.g., oil, lubricant, pesticide, etc.).
- Do not leave modules unsupported or unsecured.

- Do not change the wiring of bypass diodes.
- Keep all electrical contacts clean and dry at all times. Both connectors per module (male, female) must be covered with a plastic cover if the connection is not made immediately during the installation process in the field.

4. Mechanical Installation

4.1 Precautionary Measures and General Safety

- Prior to installing modules, please obtain information about any requirements and necessary approvals for the site, installation and inspection from the relevant authorities.
- Check applicable building codes to ensure that the construction or structure (roof, facade, support, etc.) can bear the module system load.
- BAUER Solar's standard modules have been qualified for Application Class A (equivalent to Safety Class II requirements). Modules rated under this class should be used in systems operating at voltage above 50V or power above 240W, where general contact access is anticipated.
- Consult your local authority about guidelines and requirements for building or structural fire safety. When installing modules, ensure the assembly is mounted over a fire-resistant roof covering rated for the application.
- The fire rating is only valid when the product is installed as specified in the mechanical mounting instructions.

4.2 Environmental Conditions

- PV modules are intended for use in general open-air climates, as defined in IEC 60721-2-1: Classification of environmental conditions Part 2-1: Environmental conditions appearing in nature—Temperature and humidity.
- It is recommended to install the modules in an environment with a working environment temperature of -40 °C to 50 °C, which is the monthly average highest and lowest temperature at the installation location. The maximum working environment temperature of the component is -40 °C to 85 °C.
- Please consult the BAUER Solar's technical support department for more information on the use of modules in special climates, such as an altitude greater than 2000m.
- Do not install modules near open flames or flammable materials.
- Do not immerse modules in water or constantly expose modules to water (either fresh or salt).
- Exposing modules to salt (i.e., marine environments) or sulfur (i.e., sulfur sources, volcanoes) incurs the risk of module corrosion.
- BAUER modules passed the IEC 61701 salt spray corrosion test, but the corrosion may still occur where the modules frame is connected to the bracket or where the grounding is connected.

NOTICE BAUER modules can be installed ≥ 50 m away from the ocean side, and related parts and components should be protected with anti-corrosion measures.

4.3 Installation Requirements

- Ensure that the module meets the general technical system requirements.
- Ensure that other systems components do not damage the module mechanically or electrically.
- Modules can be wired in series to increase voltage or in parallel to increase current. To connect modules in series, connect the cables from the positive terminal of one module to the negative terminal of the next module.
- To connect in parallel, connect the cables from the positive terminal of one module to the positive terminal on the next module.
- The quantity of bypass diodes in the module's junction box provided may vary depending on the model series.
- Only connect the quantity of modules that correspond to the voltage specifications of the inverters used in the system. In addition, modules must not be connected to create a voltage higher than the maximum permitted system voltage stated on the module nameplate, even under the worst local temperature conditions (see table 1 for the correction coefficients that apply to open-circuit voltage).
- A maximum of two strings can be connected in parallel without using an over-current protection device (fuses, etc.) incorporated in series within each string. Three or more strings can be connected in parallel if an appropriate and certified

over-current protection device is installed in series within each string. And it shall be ensured in the PV system design that the reverse current of any particular string is lower than the module maximum fuse rating at any circumstances.

- Only modules with similar electrical parameters should be connected in the same string to avoid or minimize mismatch effects in arrays.
- To minimize risk in the event of an indirect lightning strike, avoid forming loops with the wiring when designing the system.
- The recommended maximum series fuse rating is stated in the module datasheets.
- Modules should be safely fixed to bear all expected loads, including wind and snow loads.
- Due to thermal linear expansion a minimum distance between the modules is mandatory – at least 10 mm.
- The small drainage holes on the underside of the module must not be blocked.
- The modules cannot stand in backwater or condensation.
- They must be attached flush to the substructure, without tension, deformation or torsion, within the described clamping ranges (see following chapter).
- The clamping must be systematic, and no clamps are allowed to touch directly front or back glass of the module.

4.4 Optimum Orientation and Tilt

- To maximize the annual yield, please calculate the optimum orientation and tilt for PV modules in that specific installation site. The highest yields are achieved when sunlight shines perpendicularly onto the PV modules.
- BAUER Solar modules must be installed in the European Economic Area including Switzerland, Norway and UK with a minimum inclination angle of 5° in relation to horizontal. For projects outside of those countries BAUER recommend installing the modules also with an angle greater than 5° to provide a minimum angle for the self-cleaning effect. The maximum installation angle must follow national norm and safety requirements. For example, in Germany, when installing on a roof, the maximum installation angle to the horizontal must be lower than 75° to comply with the DIBt building regulations and there is no approval to install the modules as a façade system in Germany.
- The modules must be securely attached. To do this, use special elevated installations or assembly kits for use with photovoltaic systems.
- The modules must be adjusted to the same installation angle for the same photovoltaic generator on string level for standard installation concepts.

4.5 Avoid Shading

- Modules shall not be permanently shaded (including partial shading, spot shading, even shading or uneven shading) under any circumstance. Permanent shading includes shading of the same cell, cell row, or module portion for extended and repeated periods of time. Power dissipated in fully or partially shaded cells will result in power loss, reduced yield and can cause localized overheating, which in turn may negatively impact the module service lifetime. Permanent shading may cause accelerated ageing of the encapsulation material and place thermal stress on the bypass diodes. This would void the module's limited warranty unless properly mitigated through using Module Level Power Electronic (MLPE) devices.
- Regular maintenance is required to keep modules clean. Particular measures should be taken to avoid permanent shading from dirt or debris (e.g., plants, bird droppings, etc.).
- Do not install modules directly behind any object (e.g., tree, antenna, etc.) to prevent occurrence of permanent shading.
- Even temporary partial shading will reduce the energy yield. A module can be considered to be unshaded if its entire surface is free from shading all year round, including on the shortest day of the year.

4.6 Reliable Ventilation

- Sufficient clearance - at least 10 cm between the module frame's bottom side and the surface of the roof or the wall is required to allow cooling air to circulate around the back of the module. This also allows condensation or moisture to dissipate.
- According to UL/IEC 61730, any other specific clearance required for maintaining a system fire rating should prevail.

Detailed clearance requirements pertaining to system fire ratings must be provided by your racking supplier.

4.7 Module Wiring

Correct Wiring Scheme

- Cable management scheme should be reviewed and approved by the EPC contractor; in particular required cable lengths should be cross-checked considering the specificities of the tracker structure like bearing house gaps. If longer cable or additional jumper cables are requested, please contact BAUER Solar's sales representative in advance.
- Ensure that the wiring is correct before starting up the system. If the measured open circuit voltage (Voc) and short-circuit current (Isc) differ from the specifications, this indicates that there is a wiring fault.
- When modules have been installed but the system has not been connected to the grid yet, each module string should be kept under open-circuit conditions and proper actions should be taken to avoid dust and moisture penetration inside the connectors.
- In case a cable connection method not included in the below is used, please confirm the suitable cable length with BAUER Solar's sales representative.
- For different BAUER Solar's module types, BAUER Solar offers optional cable lengths to match various system configurations.

 
Correct Connection Connectors

- Make sure that all connections are safe and properly mated. The PV connector should not be subject to stress from the exterior. Connectors should only be used to connect the circuit. They should never be used to turning the circuit on and off.
- Connectors are not waterproof when unmated. When installing modules, connectors should be connected to each other as soon as possible or appropriate measures (like using connector endcaps) should be taken to avoid moisture and dust penetrating into the connector.
- Do not connect different connectors (manufacturer and type) together.
- Do not clean or precondition the connectors using lubricants or any unauthorized chemical substances
- Only use dedicated solar cable and suitable connectors (wiring should be sheathed in a sunlight-resistant conduit or, if exposed, should itself be sunlight-resistant) that meet local fire, building and electrical regulations. Please ensure that all wiring is in perfect electrical and mechanical condition.
- Installers shall use the single-core solar cables with a minimum cross-section of 4 mm² (12 AWG), rated for 90°C, and possessing adequate insulation to withstand the maximum possible system open-circuit voltage (as required in IEC 62930).
- Only copper conductor material should be used. Select a suitable conductor gauge to minimize voltage drop and ensure that the conductor's ampacity complies with local regulations.

Cable and Connector Protection

- Secure the cables to the mounting system using UV-resistant cable ties. Protect exposed cables from damage by taking appropriate precautions (e.g. placing them inside a metallic raceway like EMT conduct). Avoid exposure to direct sunlight.
- The bending radius of the cable must be at least four times the outside cable diameter when securing the junction box cables to the racking system.
- Protect exposed connectors from weathering damage by taking appropriate precautions. Avoid exposure to direct sunlight.
- Do not place connectors in locations where water could easily accumulate.

4.8 Grounding


- Regional or national requirements must be followed, and they can include an obligation to ground module frames.
- Grounding module frames may also be necessary for preventing lightning strikes/overvoltage.
- Adequate grounding connection must be installed as per the regulations and standards accordingly.
- BAUER Solar modules provide grounding holes, and they are marked on the rear frame side (frame C-side) with a grounding symbol  (IEC 61730-1). All conductive connection junctions must be firmly fixed.
- Grounding connections should be installed by a qualified electrician. Connect module frames together using adequate

grounding cables: the use of 4-14 mm² (AWG 6-12) copper wire is recommended.

- Do not drill any extra ground holes for convenience as this will void the modules' limited warranty.
- All bolts, nuts, flat washers, lock washers and other relevant hardware should be made of stainless steel, unless otherwise specified.
- BAUER Solar does not provide grounding hardware.
- The grounding method described below is commended by BAUER Solar.

Grounding by grounding bolt

- Use M4 bolt and washers to bond the ground wire and aluminum frame through the grounding holes (as shown in figure 1). The tightening torque is 3-7N.m. All nuts and washers should be made of stainless steel.

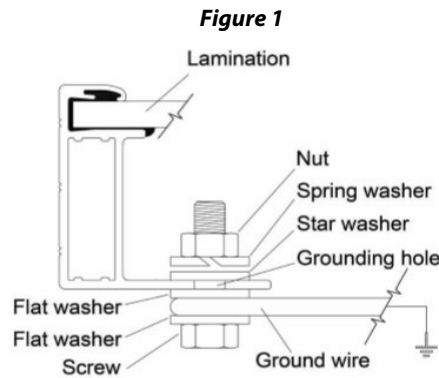

Grounding by using grounding clamp

- As shown in the **figure2**, the grounding clip assembly consists of a slider, base, and self-captivating thread-cutting screw or 8-32 screw and hex nut. The grounding clip accepts solid uninsulated copper wire sizes 10 or 12 AWG.

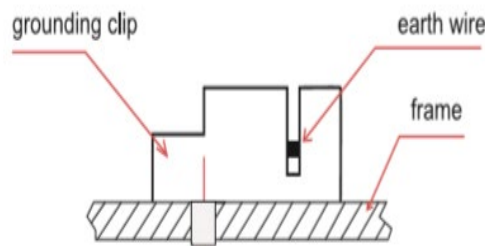


Figure 2

Addition Third-party Grounding Devices

- BAUER Solar's Modules can be grounded using third party grounding devices so long as they are certified for grounding modules and the devices are installed according to the manufacturer's specified. BAUER will not be responsible for any solar module defects caused by using the grounding devices. See grounding device example as below in figure 3 where the pin will touch the A side of the frame



Figure 3

5. Mounting Instructions

The applicable regulations pertaining to work safety, accident prevention and securing the construction site must be observed. Workers and third-party personnel should wear or install fall arrest equipment. Any third party needs to be protected against injuries and damages.

- The mounting design must be certified by a registered professional engineer. The mounting design and procedures must comply with all applicable local codes and requirements from all relevant authorities.
- The module is considered to be in compliance with IEC/UL 61730 and IEC/UL 61215 only when the module is mounted in the manner specified by the mounting instructions included in this installation manual.
- The system designer and installer are responsible for load calculations and for proper design of support structure.
- BAUER Solar does not provide mounting hardware.
- BAUER modules can be mounted with the methods described in sections 5.1 to 5.8. For the installation with tracking system and other installation methods not included in sections 5.1 to 5.8, please contact the technical support personnel of BAUER Solar for a compliance assessment. Failure to use a recognized installation method will void the BAUER Solar's limited warranty.
- Use appropriate corrosion-proof fastening materials. All mounting hardware (bolts, spring washers, flat washers, nuts) should be hot dip galvanized or stainless steel.
- Use a torque wrench for installation.
- Do not drill additional holes or modify the module frame. Doing so will void the limited warranty.
- Standard modules can be installed in either landscape or portrait orientations. Refer to the detailed instructions for further guidance. Please note that in areas with heavy snowfall (> 2400 Pa) further countermeasures such the use of additional support bars should be considered to avoid snow loads damaging the lowest row of modules.
- **The loads described in this manual correspond to test loads.** For installations complying with IEC/UL 61215 and IEC/UL 61730, a safety factor of 1.5 should be applied for calculating the equivalent maximum authorized design loads. Project design loads depend on construction, applicable standards, location and local climate. Determination of the design loads is the responsibility of the racking suppliers and/or professional engineers. For detailed information, please follow local structural code or contact your professional structural engineer.

5.1 Mounting Method: Bolting

- The mechanical load test with these mounting methods was performed according to IEC/UL 61215.
- Modules should be bolted to support structures through the mounting holes in the rear frame flanges only.
- In areas with heavy wind loads, additional mounting points should be used. The system designer and the installer are responsible for correctly calculating the loads and ensuring that the supporting structure meets all the applicable requirements.
- Each module must be securely fastened at a minimum of 4 points on two opposite sides.
- Tightening torques should be 12~16 N•m for M8 coarse thread bolts, depending on bolt class.
- Tightening torques should be 6~9 N•m for M6 coarse thread bolts, depending on bolt class.
- The method and the specifications of the fixing parts are shown in figure 4 below:

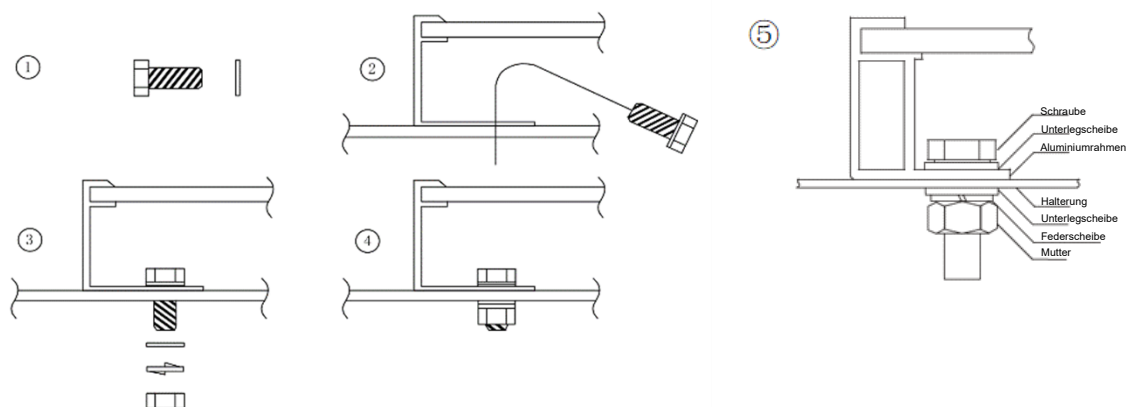


Figure 4

Table 1: Specific requirements for parts

Accessories	Model		Material
Bolt	M8	M6	Q235B/SUS304
Washer	2pcs, thickness \geq 1.5 mm and outside diameter = 16 mm	2pcs, thickness \geq 1.5 mm and outside diameter =12-18 mm	Q235B/SUS304
Spring Washer	8	6	Q235B/SUS304
Nut	M8	M6	Q235B/SUS304

- Accessories material selection should be based on application environment.
- When using 30 mm height frame module, it is recommended to select $L \leq 20$ mm length fasteners.

5.2 Mounting Method: Clamping

- The mechanical load test with these mounting methods was performed according to IEC/UL 61215.
- Top or bottom clamping methods will vary and are dependent on the mounting structures. Please follow the mounting guidelines recommended by the mounting system supplier.
- Each module must be securely fastened at a minimum of four points on two opposite sides. The clamps should be positioned symmetrically. The clamps should be positioned according to the authorized position ranges.
- Install and tighten the module clamps to the mounting rails using the torque stated by the mounting hardware manufacturer. M8 bolt and nut are used for this clamping method.
- Tightening torques should be within 16~20 N·m for M8 coarse thread bolts, depending on the bolt class. For the bolt grade, the technical guidelines from the fastener suppliers should be followed. Different recommendations from specific clamping hardware suppliers should prevail.
- The system designer and installer are responsible for load calculations and for proper design of support structure.
- BAUER Solar's limited warranty may be void in cases where improper clamps or unsuitable installation methods are found.

When installing inter-modules or end-type clamps, please take the following measures into account:

1. Do not bend the module frame.
 2. Do not touch or cast shadows on the front glass.
 3. Do not damage the surface of the frame (to the exception of the clamps with grounding pins).
 4. Ensure the clamps overlap the module frame by at least 10mm but no more than 12mm.
 5. Minimum clamp length is at least 50 mm.
 6. Ensure the clamp thickness is at least 3 mm.
 7. The definition of the clamping range results from the distance between outer edge of the module to the middle of the used clamp.
- Clamp material should be anodized aluminum alloy or stainless steel. The mounting details are shown in the following **figure5** and **figure6**.

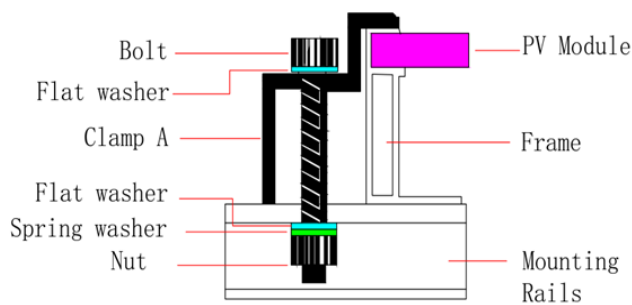


Figure 5





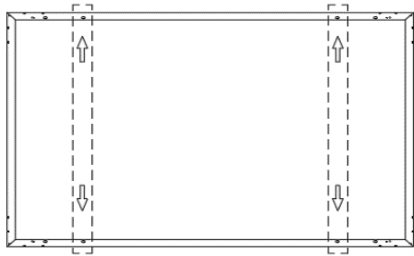
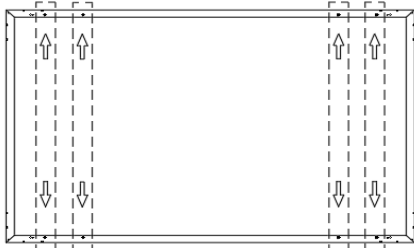


Figure 6

5.3 Max Test Loads for Standard Bolting Installations



 <p>Figure 1 O-A</p>	 <p>Figure 2 O-B</p>
<p>Outer four holes, mounting rails parallel the long frame</p>	<p>Outer four holes, mounting rails cross the long frame</p>
 <p>Figure 3 I-A</p>	 <p>Figure 4 I-B</p>
<p>Inner four holes (1150mm holes) mounting rails parallel the long frame</p>	<p>Inner four holes (1150mm holes) mounting rails cross the long frame</p>
 <p>Figure 5 D-A</p>	
<p>8 bolts at the long frame, mounting rails cross the long frame</p>	

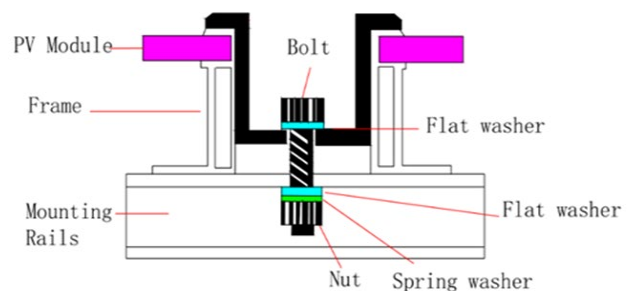Mounting Method Module Type	O-A	O-B	I-A	I-B	D-A
	Figure 1	Figure 2	Figure 3	Figure 4	Figure 5
BS-XXX-132M10 BS-XXX-144M10 BS-XXX-156M10	+2800/-2400	+5400/-2400	/	/	/
BS-XXX-132MR12	+2800/-2400	+5400/-2400	/	/	/
BS-XXX-132M12	+2800/-2400	+5400/-2400	/	/	/
BS-XXX-120MR10, BS-XXX-108G12	+2800/-2400	/	+2400/-2400	+5400/-2400	+5400/-3600
BS-XXX-108M10, BS-XXX-96G12	+2800/-2400	/	+2400/-2400	+5400/-2400	+5400/-3600


Note: The loads specified in the table above correspond to the test loads in Pascal (Pa) and are based on clamps overlapping the frame by 10mm. Test load = design load x 1.5 (in accordance with IEC 61215). The clamping ranges are in millimeters (mm). The symbol of “/” in all the tables in this document indicates that the loads of the corresponding modules and installation methods have not been verified. If required, please contact BAUER support, and we will perform further verification of unverified installation methods.

5.4 Max Test Loads for Standard Clamping Installations

5.4.1. For module type: BS-XXX-156M10 & BS-XXX-132MR12 & BS-XXX-132M10 & BS-XXX-144M10 & BS-XXX-132M12

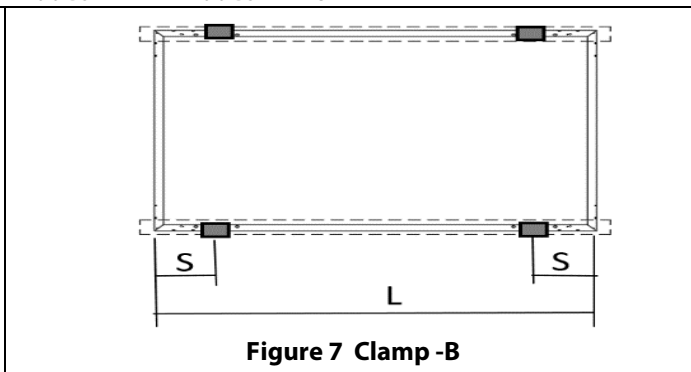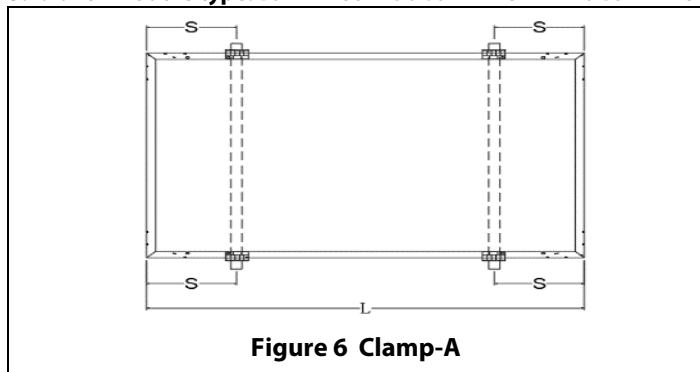

Mounting by four clamps, mounting rails cross the long frame 4 clamps, mounting rails parallel the long frame




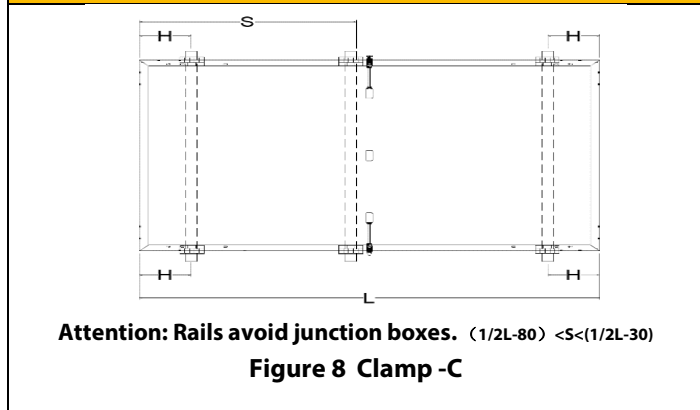


Mounting by six clamps, mounting rails cross the long frame

Module Type	Installation Method	Clamp-A	Clamp-B	Clamp-C
		L&S in Figure 6	L&S in Figure 7	H&L&S in Figure 8
BS-XXX-156M10		$445 < S < 545$	/	$1150 < S < 1200$ $360 < H < 460$
		+5400/-2400	/	+5400/-2400
BS-XXX-132MR12, BS-XXX-132M10, BS-XXX-144M10		$425 < S < 525$	$425 < S < 525$	$1110 < S < 1160$ $345 < H < 445$
		+5400/-2400	+3600/-2400	+5400/-2400
BS-XXX-132M12		$375 < S < 525$	$375 < S < 525$	/
		+5400/-2400	+2800/-2400	/

Note: The loads specified in the table correspond to the test loads in Pascal (Pa) and based on clamps overlapping the frame by 10mm. Test load = design load x 1.5 (in accordance with IEC 61215). The clamping ranges are in millimeters (mm).

5.4.2. For module type: BS-XXX-120MR10 & BS-XXX-108G12 & BS-XXX-108M10 & BS-XXX-96G12

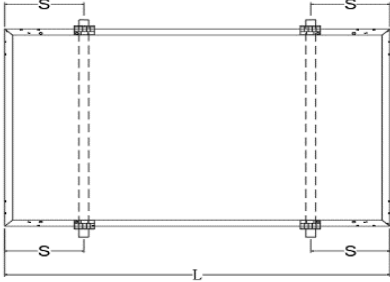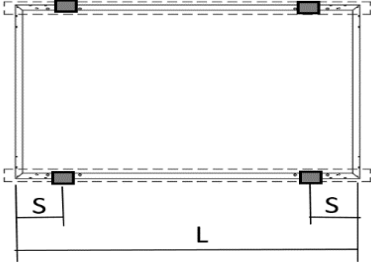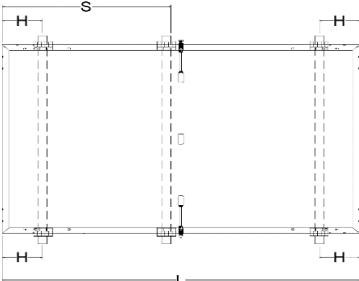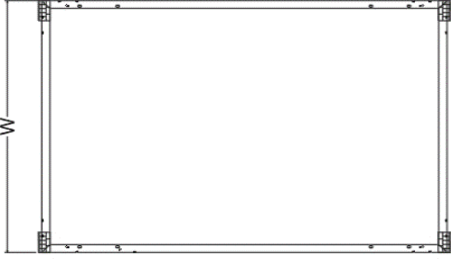 <p>Figure 6 Clamp-A</p>	 <p>Figure 7 Clamp-B</p>
<p>Mounting by four clamps, mounting rails cross the long frame</p>	<p>4 clamps, mounting rails parallel the long frame</p>
 <p>Attention: Rails avoid junction boxes. (1/2L-80) < S < (1/2L-30)</p> <p>Figure 8 Clamp-C</p>	 <p>Figure 9 Clamp-D</p>
<p>Mounting by six clamps, mounting rails cross the long frame</p>	<p>4 point corner clamping short side</p>

Module Type	Installation Method	Clamp-A			Klemme-B	Klemme-C	Klemme-D
		L&S in Figure 6			L&S in Figure 7	H&L&S in Figure 8	Figure 9 (Clamp on four corner on short side)
BS-XXX-120MR10 BS-XXX-108G12		210 < S < 340	340 < S < 440	440 < S < 570	340 < S < 440	895 < S < 945 275 < H < 375	+1600/-1000
		+2400/-1600	+5400/-2400	+2400/-1600	+3600/-2400	+8100/-2800 (clamp overlap the module front frame at least 12mm) +8100 /-2400 (clamp overlap the module front frame at least 10mm)	
BS-XXX-108M10 BS-XXX-96G12		190 < S < 300	300 < S < 400	400 < S < 540	300 < S < 400	801 < S < 850 245 < H < 345	+1800/-1600
		2600/-1800	+6100/-2400	2600/-1800	+3600/-2400	+8100/-3000 (clamp overlap the module front frame at least 12mm) +8100 /-2400 (clamp overlap the module front frame at least 10mm)	

Note: The loads specified in the table correspond to the test loads in Pascal (Pa) and based on clamps overlapping the frame by 10mm. Test load = design load x 1.5 (in accordance with IEC 61215). The clamping ranges are in millimeters (mm).

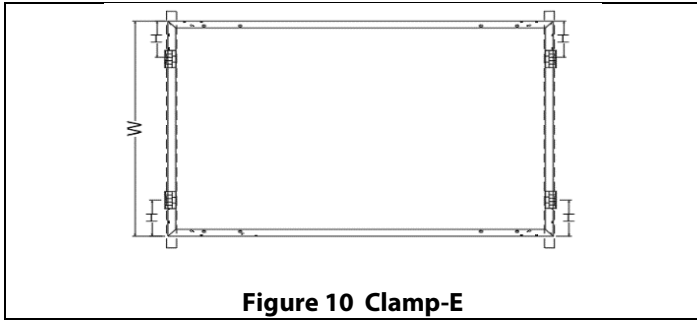


Figure 10 Clamp-E

Clamp mounting on short side of frame and rails perpendicular to the long side frame

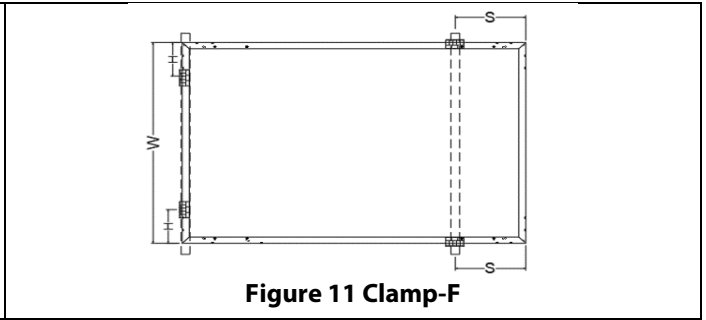


Figure 11 Clamp-F

Two clamps on the long side and two clamps on the short side of frame. Rails run perpendicular to the long side frame.

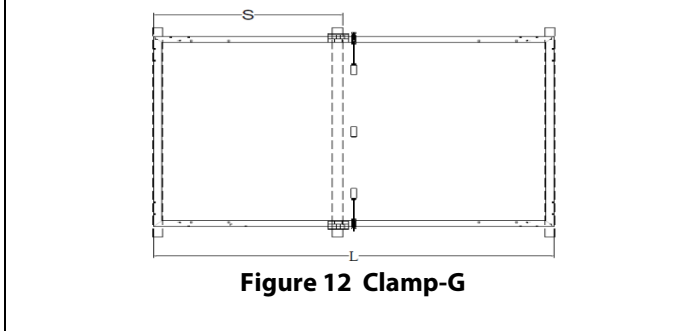


Figure 12 Clamp-G

Short side in-rail installation +long side reinforce with clamps

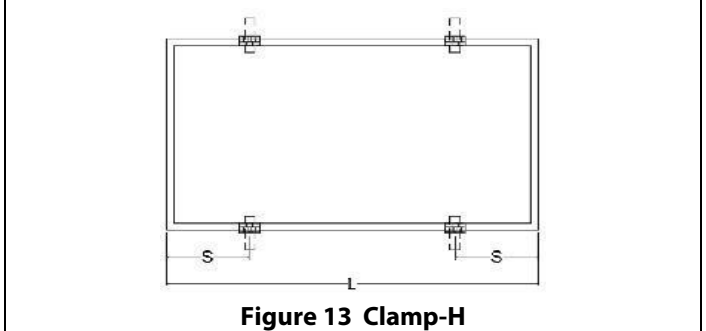


Figure 13 Clamp-H

Mounting by four clamps without mounting rails cross the long frame

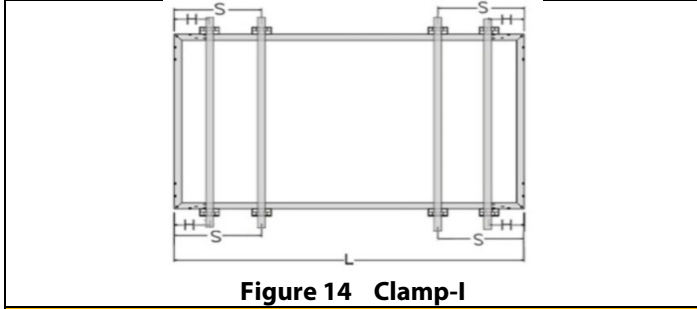


Figure 14 Clamp-I

Mounting by eight clamps, mounting rails cross the long frame

Module Type	Installation Method	Clamp-E	Clamp-F	Clamp-G	Clamp-H	Clamp-I
		H&W in Figure 10	S&H&W in Figure 11	S&L in Figure 12	S&L in Figure 13	S&H&L in Figure 14
BS-XXX-120MR10 BS-XXX-108G12		$235 < H < 335$	/	$895 < S < 945$	$435 < S < 535$	$145 < H < 245$ $435 < S < 535$
		+1800/-1100	/	+5400/-2400	+2400/-2000	+5400/-3600
BS-XXX-108M10 BS-XXX-96G12		$235 < H < 335$	$390 < S < 490$ $235 < H < 335$	$800 < S < 850$	$390 < S < 490$	$125 < H < 225$ $390 < S < 490$
		+2400/-1600	+2400/-2400	+5400/-2400	+2600/-2200	+5400/-3600

Note: The loads specified in the table correspond to the test loads in Pascal (Pa) and based on clamps overlapping the frame by 10mm. Test load = design load x 1.5 (in accordance with IEC 61215). The clamping ranges are in millimeters (mm).

6. Maintenance

- Do not make modifications to any component of the PV module (diode, junction box, connectors or others).
- Regular maintenance is required to keep modules clear of snow, bird droppings, seeds, pollen, leaves, branches, dirt spots, and dust and suchlike.
- Modules with sufficient tilt (at least 15°), generally may not require cleaning (rain will have a self-cleaning effect). If the module has become soiled, wash with water and a non-abrasive cleaning implement (sponge) during the cool part of the day. Do not scrape or rub dry dirt away, as this may cause micro scratches.
- Snow should be removed using a soft brush.
- Periodically inspect the system to check the integrity of all wiring and supports.
- To protect against electric shock or injury, electrical or mechanical inspections and maintenance should be performed by qualified personnel only.
- Module glass cracks. Special attention: avoiding rolling up sand and gravel to break the glass during the inspection of the operation and maintenance vehicles; Avoiding defects or breakage of glass caused by splashing of hard objects such as sand and gravel when using a lawn mower for weeding operations.

7. Module Cleaning Guidelines

- This manual covers the requirements for the cleaning procedure of PV modules of BAUER Solar. The purpose of these cleaning guidelines is to provide general information for cleaning BAUER Solar's modules. System users and professional installers should read these guidelines carefully and strictly follow these instructions.
- Failure to follow these instructions may result in death, injury or damage to the photovoltaic modules. Damages induced by inappropriate cleaning procedures will void BAUER Solar's limited warranty.



Safety Warning

- Cleaning activities create risk of damaging the modules and array components, as well as increasing the potential electric shock hazard.
- Cracked or broken modules represent an electric shock hazard due to leakage currents, and the risk of shock is increased when modules are wet. Before cleaning, thoroughly inspect modules for cracks, damage, and loose connections.
- The voltage and current present in an array during daylight hours are sufficient to cause a lethal electrical shock.
- Ensure that the circuit is disconnected before starting the cleaning procedure as contact with leakage of electrically active parts can result in injury.
- Ensure that the array has been disconnected to other active components (such as inverter or combiner boxes) before starting with the cleaning.
- Wear suitable protection (clothes, insulated gloves, etc.).
- Do not immerse the module, partially or totally, in water or any other cleaning solution.

NOTICE

Handling Notice

- Use a proper cleaning solution and suitable cleaning equipment.
- Do not use abrasive or electric cleaners on the module.
- Particular attention should be given to avoid the module to come in contact with sharp objects, as scratches may directly affect product safety.
- Do not use abrasive cleaners, de-greasers or any unauthorized chemical substance (e.g. oil, lubricant, pesticide, etc.) on the module.

- Do not use corrosive cleaning solutions containing hydrofluoric acid, alkali, acetone, or industrial alcohol. Only substances explicitly approved by BAUER Solar are allowed to be used for cleaning modules.
- For cleaning methods using rotating brushes, please consult with BAUER Solar's technical support before using.
- Dirt must never be scraped or rubbed away when dry, as this will cause micro-scratches on the glass surface.

OPERATION PREPARATION

- Noticeable dirt must be rubbed away by gentle cleaning implement (soft cloth, sponge or brush with soft bristles).
- Ensure that brushes or agitating tools are not abrasive to glass, EPDM, silicone, aluminum, or steel.
- Conduct the cleaning activities avoiding the hottest hours of the day, to avoid thermal stress on the module.

NOTICE

CLEANING METHODS

- Method A: Compressed Air
- BAUER Solar recommends cleaning the soft dirt (like dust) on modules just with air pressure. This technique can be applied as long as the method is efficient enough considering the existing conditions.
- Method B: Wet cleaning
- If excessive soiling is present on the module surface, a non-conductive brush, sponge, or other mild agitating method may be used with caution.
- Ensure that any brushes or agitating tools are constructed with non-conductive materials to minimize risk of electric shock and that they are not abrasive to the glass or the aluminum frame.
- If grease is present, an environmental-friendly cleaning agent may be used with caution.
- BAUER Solar recommends the following to be used:
 1. Water with low mineral content
 2. Near neutral pH water
 3. The maximum water pressure recommended is 4 MPa (40 bar).
 4. No cleaning shall be allowed when the ambient temperature is lower than 5°C to prevent the glass of the PV module from being frost-cracked.

8. Disposal



Photovoltaic modules must NOT be disposed of with household waste. Defective or old solar modules must be recycled as electronic waste in accordance with WEEE guidelines. WEEE Reg. No. DE55338746

Faulty or old modules must be disposed of correctly. They must be disposed according to the valid disposal regulations for electronic scrap.

National recycling regulations must be observed.

End users must comply with local recycling regulations.